



Caring Beyond Our Products

Elaso Cables List

System	Part	Part#	Comment
vbk005-b-04	Connecting cable	18267	4m length, for special use
vbk006-a-01	Connecting cable	14992	1m length, wire-bound collector to balancing controller
vbk006-a-03	Connecting cable	14993	3m length, wire-bound collector to balancing controller
vbk006-a-04	Connecting cable	14994	4m length, wire-bound collector to balancing controller
vbk006-a-06	Connecting cable	14995	6m length, wire-bound collector to balancing controller
vbk006-a-08	Connecting cable	14996	8m length, wire-bound collector to balancing controller
vbk006-a-10	Connecting cable	14997	10m length, wire-bound collector to balancing controller
vbk006-a-13	Connecting cable	14998	13m length, wire-bound collector to balancing controller
vbk006-a-15	Connecting cable	14999	15m length, wire-bound collector to balancing controller
vbk006-a-20	Connecting cable	18144	20m length, wire-bound collector to balancing controller
vbk006-a-30	Connecting cable	15000	30m length, wire-bound collector to balancing controller
vbk006-b-01	Connecting cable	15297	1m length, wire-bound collector to eb7000 controller
vbk006-b-03	Connecting cable	15298	3m length, wire-bound collector to eb7000 controller
vbk006-b-04	Connecting cable	15299	4m length, wire-bound collector to eb7000 controller
vbk006-b-06	Connecting cable	15300	6m length, wire-bound collector to eb7000 controller
vbk006-b-08	Connecting cable	15301	8m length, wire-bound collector to eb7000 controller
vbk006-b-10	Connecting cable	15302	10m length, wire-bound collector to eb7000 controller
vbk006-b-13	Connecting cable	15303	13m length, wire-bound collector to eb7000 controller
vbk006-b-15	Connecting cable	15304	15m length, wire-bound collector to eb7000 controller
vbk006-b-30	Connecting cable	15305	30m length, wire-bound collector to eb7000 controller
vbk006-c-04	Connecting cable	14889	4m length, wire-bound collector (stalmt) to controller
vbk006-c-06	Connecting cable	18142	6m length, wire-bound collector (stalmt) to controller
vbk007-a-03	Connecting cable	15027	3m length, wire-bound collector to balancing controller
vbk007-a-04	Connecting cable	15028	4m length, wire-bound collector to balancing controller
vbk007-a-06	Connecting cable	15029	6m length, wire-bound collector to balancing controller
vbk007-a-08	Connecting cable	15030	8m length, wire-bound collector to balancing controller
vbk007-a-10	Connecting cable	15031	10m length, wire-bound collector to balancing controller
vbk007-a-13	Connecting cable	15032	13m length, wire-bound collector to balancing controller
vbk007-a-15	Connecting cable	15033	15m length, wire-bound collector to balancing controller
vbk007-a-30	Connecting cable	15034	30m length, wire-bound collector to balancing controller
vbk007-b-01	Connecting cable	14983	1m length, no-contact to eb7000 balancing controller
vbk007-b-03	Connecting cable	14984	3m length, no-contact to eb7000 balancing controller
vbk007-b-04	Connecting cable	14985	4m length, no-contact to eb7000 balancing controller
vbk007-b-06	Connecting cable	14986	6m length, no-contact to eb7000 balancing controller
vbk007-b-08	Connecting cable	14987	8m length, no-contact to eb7000 balancing controller
vbk007-b-10	Connecting cable	14988	10m length, no-contact to eb7000 balancing controller
vbk007-b-13	Connecting cable	14989	13m length, no-contact to eb7000 balancing controller
vbk007-b-15	Connecting cable	14990	15m length, no-contact to eb7000 balancing controller
vbk007-b-30	Connecting cable	14991	30m length, no-contact to eb7000 balancing controller
vbk007-c-01	Connecting cable	18084	1m length, water proof connector, no-contact collector to controller
vbk007-c-06	Connecting cable	19002	6m length, water proof connector, no-contact collector to controller
vbk007-d-13	Connecting cable	14974	13m length, with angle plug, no-contact collector to controller
vbk009-a-04	Connecting cable	14976	4m length, operator interface to eb6001 controller
vbk009-a-08	Connecting cable	19005	8m length, operator interface to eb6001 controller
vbk015-a-005	Connecting cable	17556	0.5m length, from eb500 to additional module
vlk002-a-02	Extension cable	15041	2m length, for vas002 vibration transducer
vlk002-a-03	Extension cable	15042	3m length, for vas002 vibration transducer
vlk002-a-04	Extension cable	15043	4m length, for vas002 vibration transducer
vlk002-a-06	Extension cable	15044	6m length, for vas002 vibration transducer
vlk002-a-08	Extension cable	15314	8m length, for vas002 vibration transducer
vlk002-a-10	Extension cable	15045	10m length, for vas002 vibration transducer
vlk002-a-15	Extension cable	15046	15m length, for vas002 vibration transducer
vlk002-b-06	Extension cable	19001	6m length, water proof connector, for vas002 vibration transducer
vlk005-a-01	Extension cable	17373	1m length, for vas005 vibration transducer
vlk005-a-03	Extension cable	18864	3m length, for vas005 vibration transducer
vlk005-a-04	Extension cable	17374	4m length, for vas005 vibration transducer
vlk005-a-05	Extension cable	18311	5m length, for vas005 vibration transducer
vlk005-a-06	Extension cable	17375	6m length, for vas005 vibration transducer
vlk005-a-07	Extension cable	18805	7m length, for vas005 vibration transducer
vlk005-a-08	Extension cable	17376	8m length, for vas005 vibration transducer
vlk005-a-10	Extension cable	17377	10m length, for vas005 vibration transducer



Caring Beyond Our Products

System	Part	Part#	Comment
vlk005-a-13	Extension cable	17378	3m length, for vas005 vibration transducer
vlk005-a-16	Extension cable	18865	16m length, for vas005 vibration transducer
vlk005-b-03	Extension cable	18863	3m length, for uss1/uss2 sound sensor
vlk005-b-05	Extension cable	17419	3m length, for uss1/uss2 sound sensor
vlk005-b-07	Extension cable	18873	3m length, for uss1/uss2 sound sensor
vlk005-b-10	Extension cable	18185	3m length, for uss1/uss2 sound sensor
vlk005-b-16	Extension cable	18862	3m length, for uss1/uss2 sound sensor
vlk005-c-10	Extension cable	18812	10m length, for uss sound sensor
vlk006-a-04	Extension cable	15009	4m length, for vbk006-a cable
vlk006-a-06	Extension cable	15010	6m length, for vbk006-a cable
vlk006-a-08	Extension cable	15011	8m length, for vbk006-a cable
vlk006-a-10	Extension cable	15012	10m length, for vbk006-a cable
vlk006-a-13	Extension cable	15013	13m length, for vbk006-a cable
vlk006-a-15	Extension cable	15014	15m length, for vbk006-a cable
vlk006-b-01	Extension cable	18995	1m length, with angle plug, for vbk006-a
vlk007-a-04	Extension cable	15035	4m length, for vbk007-a cable
vlk007-a-06	Extension cable	15036	6m length, for vbk007-a cable
vlk007-a-08	Extension cable	15037	8m length, for vbk007-a cable
vlk007-a-10	Extension cable	15038	10m length, for vbk007-a cable
vlk007-a-13	Extension cable	15039	13m length, for vbk007-a cable
vlk007-a-15	Extension cable	15040	15m length, for vbk007-a cable
spk004-a-060	Helix cable	15015	60/200/700mm, collector to balancing head, no sound monitoring
spk004-a-100	Helix cable	15016	100/270/900mm, collector to balancing head, no sound monitoring
spk004-a-200	Helix cable	15017	200/370/1500mm, collector to balancing head, no sound monitoring
spk004-a-400	Helix cable	15018	400/570/2500mm, collector to balancing head, no sound monitoring
spk004-b-060	Helix cable	15019	60/200/700mm, collector to balancing head, no sound monitoring
spk004-b-100	Helix cable	15020	100/270/900mm, collector to balancing head, no sound monitoring
spk004-b-200	Helix cable	15021	200/370/1500mm, collector to balancing head, no sound monitoring
spk004-b-400	Helix cable	15022	400/570/2500mm, collector to balancing head, no sound monitoring
spk004-c-060	Helix cable	14023	60/200/700mm, collector to balancing head, no sound monitoring
spk004-d-120	Helix cable	18082	120/200/500mm, collector to balancing head, no sound monitoring
spk008-a-060	Helix cable	15023	60/200/700mm, collector to balancing head, with sound monitoring
spk008-a-100	Helix cable	15024	100/270/900mm, collector to balancing head, with sound monitoring
spk008-a-200	Helix cable	15025	200/370/1500mm, collector to balancing head, with sound monitoring
spk008-a-400	Helix cable	15026	400/570/2500mm, collector to balancing head, with sound monitoring
adk004-a	Adapter cable	15047	from sta collector, no tacho, to controller
adk006-a	Adapter cable	14036	from vbk006-a to eb7000 controller
adk007-a	Adapter cable	14034	from vbk007-a to eb7000 controller
adk012-a	Adapter cable	15379	remote if eb4004 is replaced by eb5004 or eb4500
adk034-a	Adapter cable	14886	from vas002 vibration transducer to eb7000 controller
adk046-a	Adapter cable	15051	from wire-bound collector to eb4001 controller
nek002-b-008	Power cable 24V	17557	0.8m length
nek002-a-02	Power cable 24V	18194	2m length

All text, technical data, measurements and samples were prepared thoroughly. However Elaso and CIRO Products Ltd. cannot be held liable for errors and omissions. Elaso and CIRO Products Ltd. reserve the right to improve or change the design of hard and software and make changes to the technical documentation without further notice.

CIRO Products Ltd
PO Box 1432
Hickory 28603-1432 USA

Toll free: (888) ASK CIRO
Phone: (828) 345-6030
Fax: (828) 345-6013

Web: www.ciro.com
E-mail: info@ciro.com